



IT IS ESSENTIAL TO REMOVE U21 & U19 IF YOU USE THE USB SERIAL ADAPTOR

IT IS ESSENTIAL TO REMOVE U20 & U18 IF YOU USE THE USB SERIAL ADAPTOR

P10	10	10
P9	9	9
P8	8	8
P7	7	7
P6	6	6
P5	5	5
P4	4	4
P3	3	3
P2	2	2
P1	1	1
P0	0	0
P11	11	11
P12	12	12
P13	13	13
P14	14	14
P15	15	15
P16	16	16
P17	17	17
P18	18	18
P19	19	19
P20	20	20
P21	21	21
P22	22	22
P23	23	23
P24	24	24
P25	25	25
P26	26	26
P27	27	27
P28	28	28
P29	29	29
P30	30	30
P31	31	31
P32	32	32
P33	33	33
P34	34	34
P35	35	35
P36	36	36
P37	37	37
P38	38	38
P39	39	39
P40	40	40
P41	41	41
P42	42	42
P43	43	43
P44	44	44
P45	45	45
P46	46	46
P47	47	47
P48	48	48
P49	49	49
P50	50	50
P51	51	51
P52	52	52
P53	53	53
P54	54	54
P55	55	55
P56	56	56
P57	57	57
P58	58	58
P59	59	59
P60	60	60
P61	61	61
P62	62	62
P63	63	63
P64	64	64
P65	65	65
P66	66	66
P67	67	67
P68	68	68
P69	69	69
P70	70	70
P71	71	71
P72	72	72
P73	73	73
P74	74	74
P75	75	75
P76	76	76
P77	77	77
P78	78	78
P79	79	79
P80	80	80
P81	81	81
P82	82	82
P83	83	83
P84	84	84
P85	85	85
P86	86	86
P87	87	87
P88	88	88
P89	89	89
P90	90	90
P91	91	91
P92	92	92
P93	93	93
P94	94	94
P95	95	95
P96	96	96
P97	97	97
P98	98	98
P99	99	99
P100	100	100