


INPUT PORTS

OUTPUT PORTS

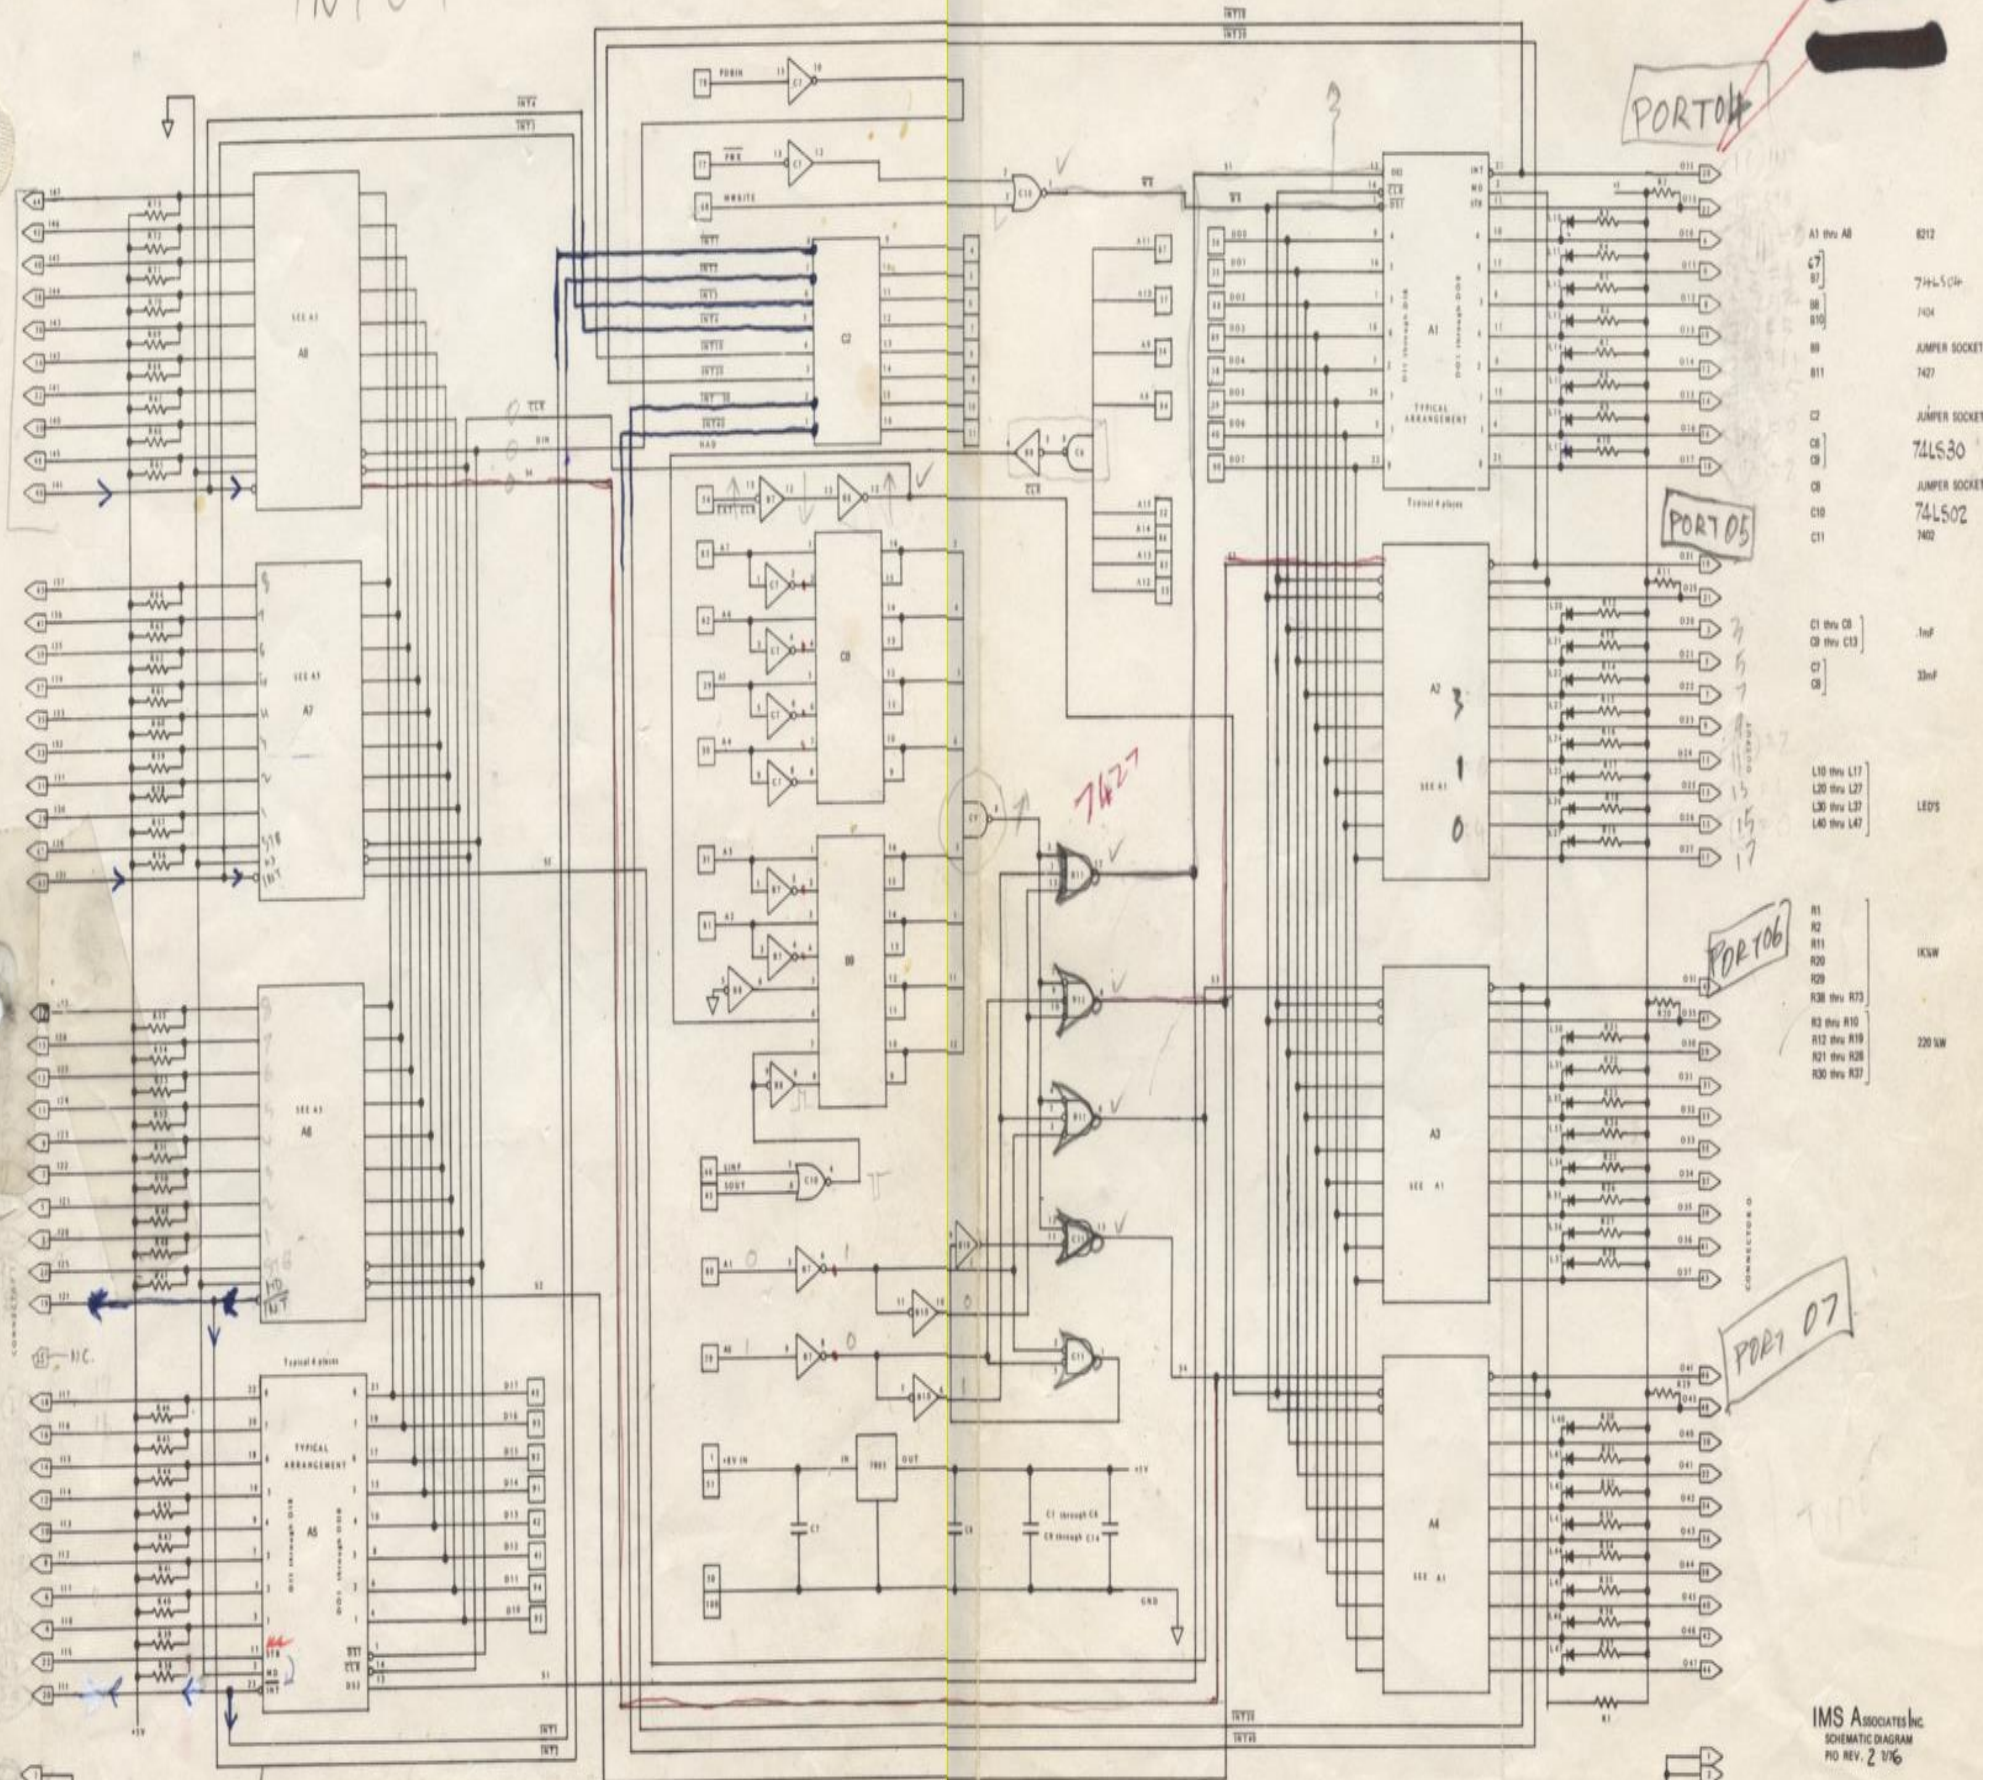

INT goes low after strobe &
CPU reads from the port
in doing so it causes
the INT line to rise again.

- A1 thru A8 8212
- C7 74LS04
- B1 74LS04
- B8 JUMPER SOCKET 7407
- B11 JUMPER SOCKET 74LS00
- C2 JUMPER SOCKET 74LS00
- C8 JUMPER SOCKET 74LS02
- C10 JUMPER SOCKET 7402
- C1 thru C3 74LS00
- C7 74LS00
- C8 74LS00
- L10 thru L17 74LS00
- L20 thru L27 74LS00
- L30 thru L37 74LS00
- L40 thru L47 74LS00
- R1 74LS00
- R2 74LS00
- R11 74LS00
- R20 74LS00
- R29 74LS00
- R38 thru R45 74LS00
- R53 thru R60 74LS00
- R62 thru R69 74LS00
- R71 thru R78 74LS00
- R80 thru R87 74LS00